

User Manual for **SONIC MINI**

Thanks for Choosing Phrozen 3D Printer !

Dear Phrozen's User,
Glad you've joined us. For the best experience, please read through Phrozen manual and follow step-by-step guidance before you start.

Feel free to contact us if you have any questions.
Email: support@phrozen3d.com

Multi-language manuals and related software are available on our official website at phrozen3d.com/page/download

Facebook: @Phrozen3DP
Twitter: @PhrozenDLP
Instagram: @Phrozen3DP
Youtube: @Phrozen3DPrinter



Chinese version starts from **Page 18** ▶▶▶


INDEX

I. Key Notes Before We Start	3
II. What You Have In The Box	4
III. Printer Parts	5
IV. Sonic Mini Technical Spec	6
V. Calibrate & Test	7
VI. Test Printing	9
VII. Post Processing	10
VIII. Prepare Your File	11
IX. FAQ	14
X. Maintenance	15
XI. Congratulations	16

Key Notes Before We Start !

- ▶ Keep printer & resin away from kids and direct sunlight exposure. Also make sure they're in a cool, dry, and ventilated environment.
- ▶ Every printer is pre-calibrated. However, we still recommend you to do calibration when you use the printer for the first time.
- ▶ Before starting every print, please clean the resin vat and refill the resin to avoid potential debris and pigment separation which may influence your printer / print.
- ▶ Filling the resin in the resin vat with 1/3 height is good enough. DO NOT fill it up.
- ▶ Please wear PPE (Personal Protective Equipment) like mask, goggles, and long sleeves coat when operating printers and resins.
- ▶ Please clean the model with 95% Alcohol, IPA, or special detergent like Phrozen Wash.
- ▶ Be careful when using scraper to remove the print from build platform. It might cut your hand if it is wrongly operated.
- ▶ Please DO NOT dis-assemble printer by yourself. It may cause your warranty expired.


What You Have In The Box

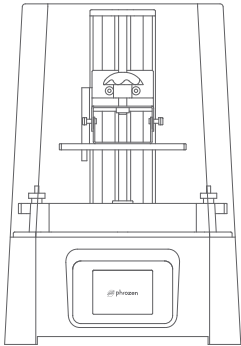

Sonic Mini



User Manual



Gloves



Scrapers




Allen Wrench




Plastic Funnel




USB



Build Platform



Resin Vat



Backup Screws





Adaptor



Foot Pad

Printer Parts

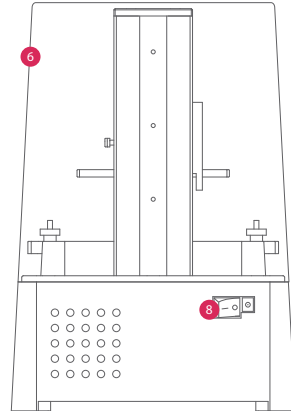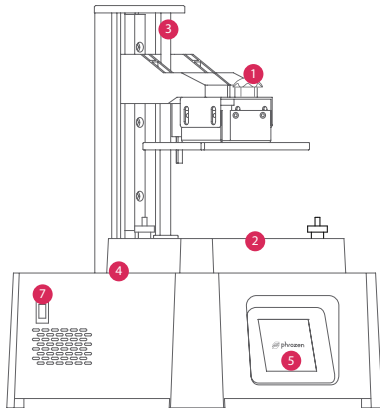

1 Build Platform

2 Resin Vat

3 Z-Axis

4 LCD

5 Touch Panel

6 Plastic Case

7 USB Port

8 Power Switch

Sonic Mini Technical Spec

System: Phrozen OS
Operation: 2.8 inch Touch Panel
Slicer Software: ChiTu Box V1.6.1
Connectivity: USB

Operation

Technology: Resin 3D Printer - LCD Type
Light Source: 405nm ParaLED® Array Matrix
XY Resolution: 0.0625 mm
Layer Thickness: 0.01 - 0.30 mm
Printing Speed: 50 mm / hr
Power Requirement: AC100-240V~50/60Hz



Printing Specification

Printer Size: 25 (L) x 25 (W) x 33 (H) cm
Printing Volume: 12 (L) x 6.8 (W) x 13 (H) cm
Printer Weight: 4.5 kg


Hardware Specification

Calibrate & Test


- 1 Take out the printer from the box, plug in the power cord, and turn on the power switch.
- 2 Screw the build platform and resin vat on the printer, and tighten them up.

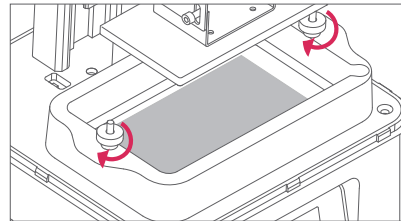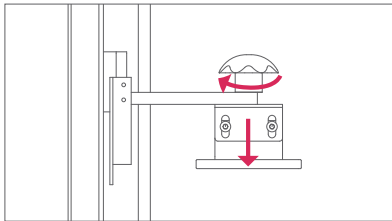






- 3 Click **TOOLS** and then click **LCD TEST**. Then LCD will be lit up.
- 4 If the LCD can display a complete image as shown on touch panel, that means optical engine (LCD + LED) works perfectly.

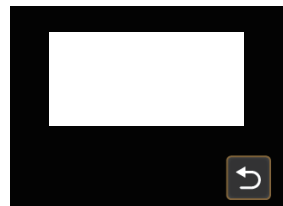

- 4 Loosen 4 screws on the side of building platform by Allen wrench.

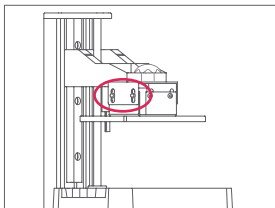

- 5 Click **TOOLS**, then click **Z Calib** to start the calibration.
After the build platform reaches the bottom of resin vat, tighten 4 screws on the side of building platform by Allen wrench.

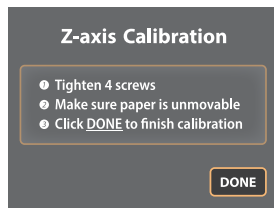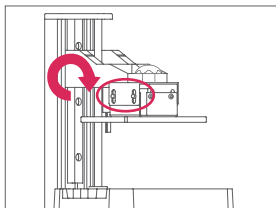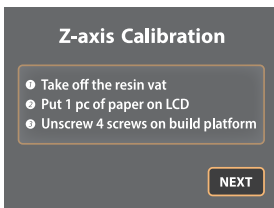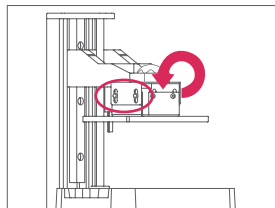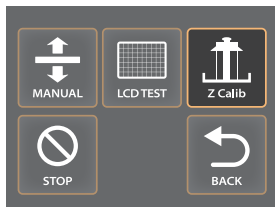


Test Printing

- 1 Wear PPE (Personal Protective Equipment) .
- 2 Shake the resin for 1 minute and pour it into the vat to fill 1/3 of the vat.
- 3 Plug USB (with sliced 3D file) into printer.
- 4 Load the sliced 3D files in USB through touch panel and click **GO** .
- 5 Once the printing process starts, close the plastic case and wait till process finishes.



- 6 Wait till there's no resin drips once the process is completed.
- 7 Use scraper CAREFULLY to remove the print.

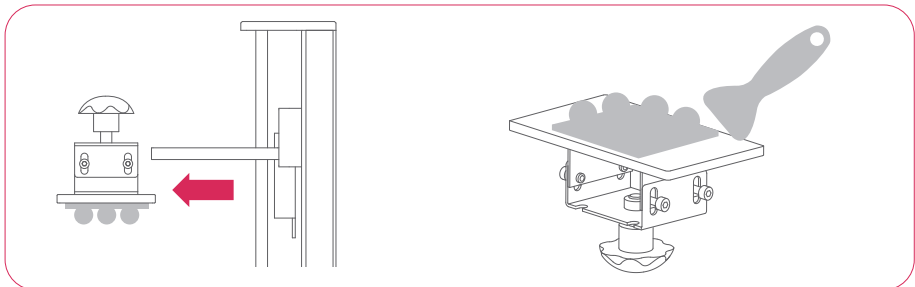

Post Processing

- 1 Use 95% alcohol, IPA, or detergent like Phrozen Wash to clean your print. Ultra-sonic cleaner is recommended for cleaning hollowed parts.
- 2 Post-cure your print by UV lamp. Curing time depends on the intensity and wavelength of your lamp. Prints can be cured within 15 minutes in average by Phrozen Cure .

 Post-Processing



youtu.be/Ogker8J-9FM

 Youtube channel



<https://reurl.cc/Oz5G8b>

SAFETY GUIDE

- 1 Keep resin away from direct sunlight exposure.
- 2 DO NOT dump resin casually. Care it completely and then treat it as general plastic waste.
- 3 Wear PPE(Personal Protective Equipment) like goggles, gloves...etc.
- 4 Resin is not allowed to be swallowed or contacted with eyes & skins directly.
- 5 Stop using UV resin if it causes allergy.



Prepare Your File

1 Install ChiTu Box

Install ChiTu Box V1.6.1 (or above version) in the USB. Run ChiTu Box after installation.

2 Find ChiTu Box Setting


Click Setting and add a new printer. Select “Phrozen Sonic Mini” as your default printer.

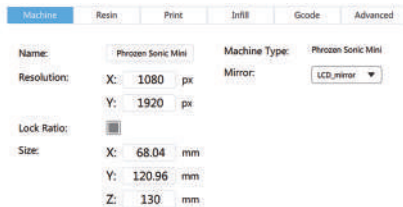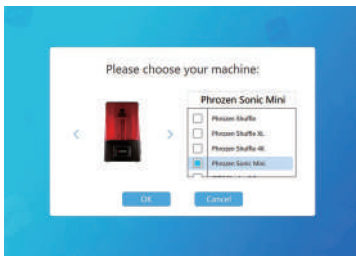

3 Setup of ChiTu Box

3.1 Resin Parameter

- ▶ Put Resin Density: 1.1g / ml and your resin cost for printing cost estimation.

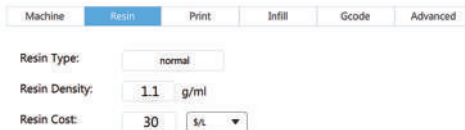

3.2 Print Parameter

- ▶ **Layer Height:** Best recommended range is 0.03 - 0.100 mm. Thinner layer makes part finer but takes longer time to print.
- ▶ **Bottom Layer Count:** 3 - 6 layers. More layers for better adhesion to build platform.
- ▶ **Exposure Time:** set from 1-3 sec for LCD resins and 3-10 for DLP resins. Thicker layer requires more exposure time.
- ▶ **Bottom Exposure Time:** set from 20-40 sec for LCD Resins and 40-80 sec for DLP resins. Thicker layer requires more exposure time.
- ▶ **Other Setting:** Please use default setting.

Machine	Resin	Print	Infill	Gcode	Advanced
Layer Height:	<input type="text" value="0.05"/>	mm	Bottom Lift Distance:	<input type="text" value="6"/>	mm
Bottom Layer Count:	<input type="text" value="6"/>		Lifting Distance:	<input type="text" value="5"/>	mm
Exposure Time:	<input type="text" value="1.5"/>	s	Bottom Lift Speed:	<input type="text" value="100"/>	mm/min
Bottom Exposure Time:	<input type="text" value="20"/>	s	Lifting Speed:	<input type="text" value="100"/>	mm/min
Light-off Delay:	<input type="text" value="7"/>	s	Retract Speed:	<input type="text" value="150"/>	mm/min
Bottom Light-off Delay:	<input type="text" value="7"/>	s			

3.3 Infill / Gcode

Please use default setting.

3.4 Advanced

Turn on anti-aliasing function could roughen the edge and make print smooth, but it will somehow influence dimension accuracy in certain prints.

4 Load & Edit Model

- Open test 3D file (.stl) from USB or your own file.
- Menu on the left can change dimension, angle, position of the 3D file.
- Menu on the top can hollow and dig holes on the 3D file.
- You can add support on your 3D file if there are overhangs.

► Other Operation:

- **Long Press Left Button:** drag the 3D file to proper position.
- **Scroll Wheel:** zoom in/out of the view.
- **Long Press Right Button:** see different angles of the view.

5 Save Model

- After setting up all the parameter, click "Slice". Once it is done, click "Save" Move the file from your laptop to the USB and load it to your 3D printer.
- Once it is done, click "Save". You will get a sliced .phz file.
(zip file composed of sliced png files & preview image)

FAQ

1 My Sonic Mini Cannot Work Functionally

- Phrozen offer a full-one year warranty on printer and 3-month warranty on LCD for Sonic Mini.
- If your printer doesn't work, please contact us through support@phrozen3d.com
- If you buy Sonic Mini from our distributor, please contact them for claim of warranty.
- Order ID is required if you need to claim warranty.

2 Model Is Not Able To Stick To Build Platform

- Re-do Z-axis calibration.
- Increase cure time in base layer.
- Roughen the build plate surface by sanding it.

3 Model Is Falling Down In Vat, but Support / Base Stick To Build Platform

- Check whether cure time is in proper range.
- Check the support setup - increasing support density & tip diameter could help.

4 Micro Holes are Found in Finished Print

- Check whether cure time is in proper range.
- Check whether there are debris between resin vat and LCD.
- Check if there are dead pixels on LCD

5 Finish Print Crack Easily

- Check whether the print is cleaned completely, especially for hollow parts.
- Increasing cure time could also help.

Maintenance

① How to Replace FEP & LCD

- Check our Youtube Channel for more details.

② How to Maintain Z-axis

- General lubricant could be applied on the Z-axis screw to make it move fluently.

③ Clean the Vat with Proper Tool

- To protect release film, use plastic spreader to clean the vat instead of sharp scraper.

④ Remove Build Platform with Care

- Build Platform will smash LCD screen if it bumps against it.

⑤ Storage of Resins

- Filter the resin and make sure there are no residues. Keep the resin in opaque & sealed bottles without sunlight exposure.

⑥ Cleaning the Printer

- Clean the printer, build platform, and resin vat with alcohol and tissues directly.

Congratulations !

You have finished your first run of the printing. Hope you have a great moment with Phrozen Sonic Mini.

Now it's the beginning of your 3D printing journey. Here are 3 tips for you.

- 1 Follow Phrozen Facebook Page for latest news & updates.
- 2 Join [Phrozen 3D Printer Group](#) to discuss with other users.
- 3 When you have questions, feel free to contact us by emailing support@phrozen3d.com or send private message to Phrozen Facebook Page. (www.facebook.com/messages/t/Phrozen3DP)

 Send private message to Phrozen Facebook Page.



Facebook: [@Phrozen3DP](#)

Twitter: [@PhrozenDLP](#)

Instagram: [@Phrozen3DP](#)

Youtube: [@Phrozen3DPrinter](#)






Email Support



Message Support



Discussion Group

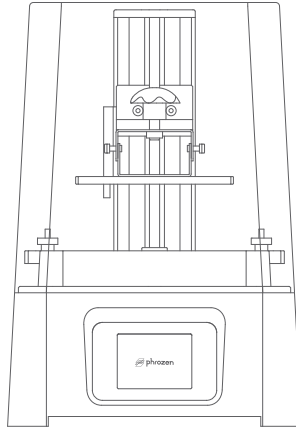

Phrozen3DP.com